CLIVCEOVEZ

INSTRUCTION MANUAL

User Manual · Digital Signage Display

Model: DK-vertical series
Model: DK-wall-mounted series
Model: DK-Desktop screen series



CATALOGUE

Safety Precautions ---------- 01

Product Specifications ---------- 02~04

Troubleshooting ---------- 05

Connect to Wi-Fi ---------- 06~07

Publish Content By USB Drive ---- 08~09

Publish Content By CMS System -- 10~20

Publish Content By Mobile APP --- 21~24

Remote Control Guide ---------- 25

Safety Precautions

1.Power Requirements

AC 100–240V, 50/60Hz power supply.

2.Do not dismantle the machine

Unauthorized disassembly voids the warranty.
Any damage caused by disassembly is the sole responsibility of the user.

3.Keep Dry

Store and use the display in a well-ventilated area, away from moisture.

4.Cleaning

Wipe the housing with a soft, dry cloth.
(This device is not waterproof.)

5.Remote Control Batteries

Batteries are not included.
Insert 2 × AAA batteries before first use.

Product Specifications

Wall-mounted advertising display	
Size	32" / 43" / 50" / 55"
resolution	1920 × 1080 (32") 3840 × 2160 (43"–55")
Power supply	AC 100–240V, 50/60Hz
viewing angle	178° (Typ.) (CR>10)
Brightness	450 cd/m² (Typ.)
interface	Power connector / USB ×2 / power switch / Ethernet port

Notes:

* USB drive: must be formatted as FAT32.

* Video: MP4, H.264 (recommended) or H.265 (HEVC). Resolution must match the display. Frame rate 30 fps. Bit rate approx. 5,000 kbps. Audio sampling rate 44.1 kHz.

* Image: JPG. Resolution must match the display. 72 dpi, RGB 8-bit. For PNG files, flatten all layers before uploading.

Product Specifications

Floor-Standing Advertising Display	
Size	43" / 50" / 55" / 65"
resolution	3840 × 2160 (Default)
Power supply	AC 100–240V, 50/60Hz
viewing angle	178° (Typ.) (CR>10)
Brightness	450 cd/m² (Typ.)
interface	Power connector / USB ×2 / power switch / Ethernet port

Notes:

* USB drive: must be formatted as FAT32.

* Video: MP4, H.264 (recommended) or H.265 (HEVC). Resolution must match the display. Frame rate 30 fps. Bit rate approx. 5,000 kbps. Audio sampling rate 44.1 kHz.

* Image: JPG. Resolution must match the display. 72 dpi, RGB 8-bit. For PNG files, flatten all layers before uploading.

Product Specifications

Desktop Advertising Display	
Size	21.5"/24"
resolution	1920 × 1080 (Default)
Power supply	AC 100–240V, 50/60Hz
viewing angle	178° (Typ.) (CR>10)
Brightness	700 cd/m² (Typ.)
interface	Power connector / USB ×2 / Ethernet port HDMI / 3.5 mm audio jack / TF (microSD) card

Notes:

* USB drive: must be formatted as FAT32.

* Video: MP4, H.264 (recommended) or H.265 (HEVC). Resolution must match the display. Frame rate 30 fps. Bit rate approx. 5,000 kbps. Audio sampling rate 44.1 kHz.

* Image: JPG. Resolution must match the display. 72 dpi, RGB 8-bit. For PNG files, flatten all layers before uploading.

Troubleshooting

1. The display will not power on?

- Check whether the unit is damaged.
- Make sure the power cord is securely plugged in.

2. Unable to connect to the network?

- Make sure the Wi-Fi antenna is securely connected.
- Make sure you are connecting to a 2.4 GHz network.
- If using a wired connection, make sure the Ethernet cable is working properly.

3.The display does not recognize the USB drive?

- Try a different USB port.
- Make sure the drive is working properly and is formatted as FAT32.


Customer Support

Email: 【support@clivceovez.com】

We usually respond within 24 hours, Monday–Friday.

Connect to Wi-Fi

Connect to Wi-Fi

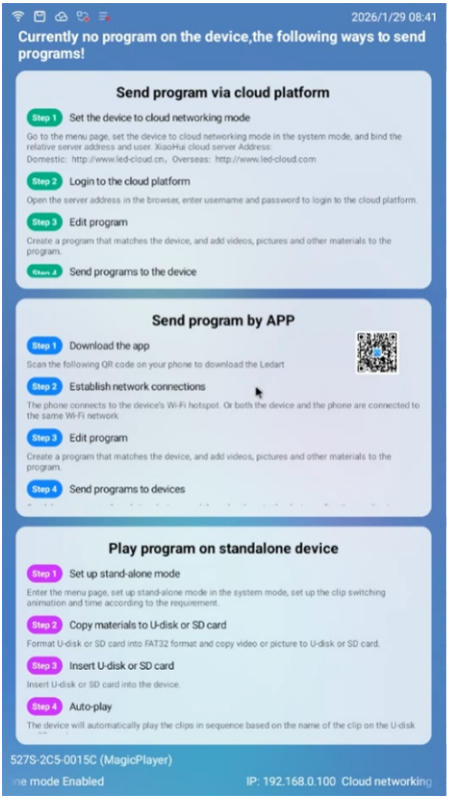



1.MOUSE OPERATION



CONTINUOUS MOUSE CLICKS 

ENTER THE MESSAGE SENDING INTERFACE

2.REMOTE CONTROL OPERATION

REMOTE CONTROL CLICK 

ENTER THE MESSAGE SENDING INTERFACE



3.TOUCH OPERATION



TAP THE SCREEN CONTINUOUSLY 

ENTER THE MESSAGE SENDING INTERFACE


(*THE DEVICE NEEDS TO BE A TOUCH VERSION)







Tap this icon 5 times in a row

- Tap this icon five times in a row, or
- Click the icon with a mouse, or
- Press the MENU button on the remote control, or
- On touch models, tap the icon directly.
  (*Touch models only)

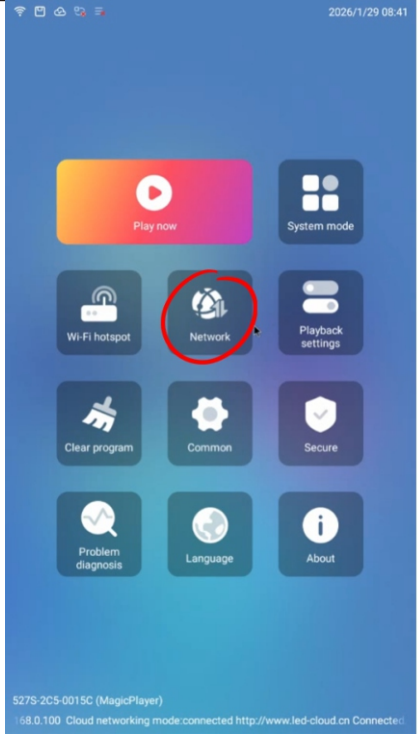




Choice Network

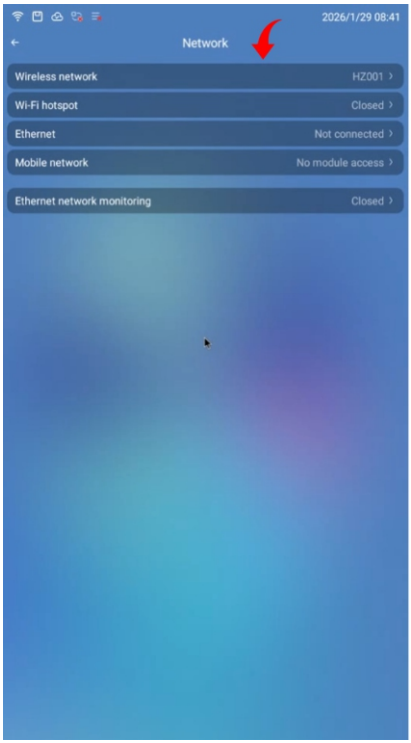




Click into Wireless network

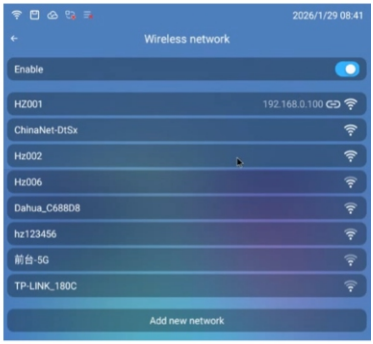


Select the network, and then Enter wireless network Connect to your WI-FI

Publish Content By USB Drive

Publish Content By USB Drive

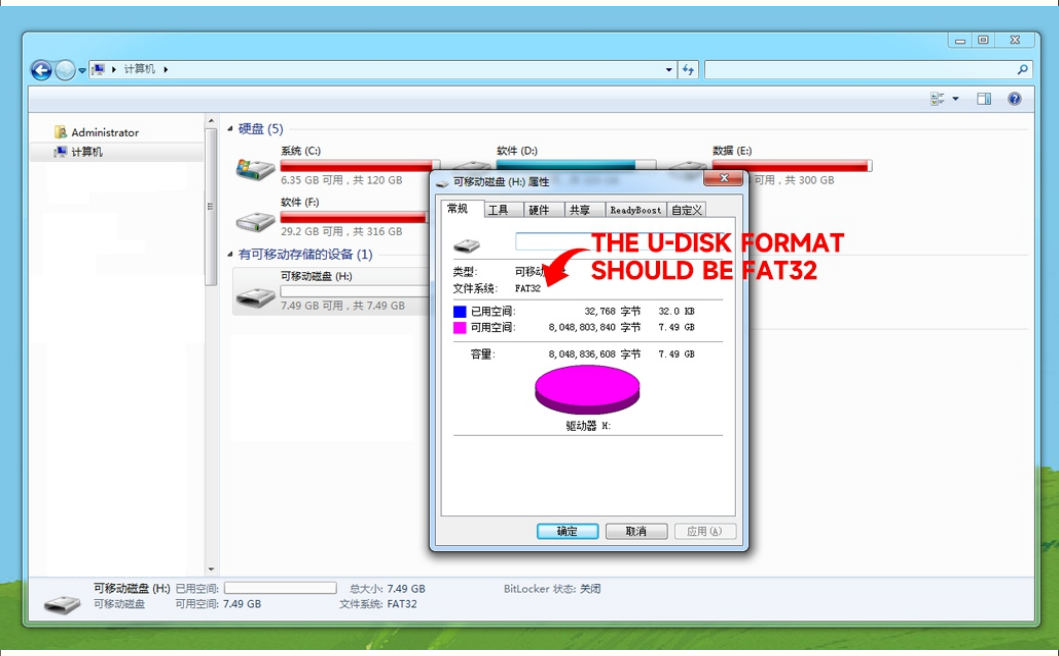


Prepare a FAT32 formatted USB flash drive

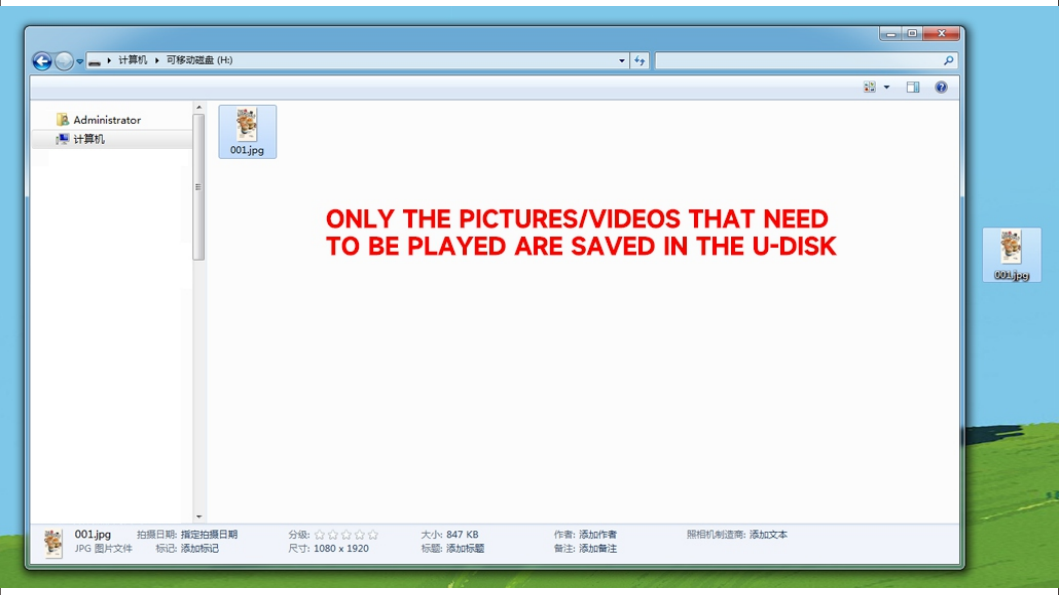

Put the content to be played into the USB drive




Insert the USB drive into the USB port

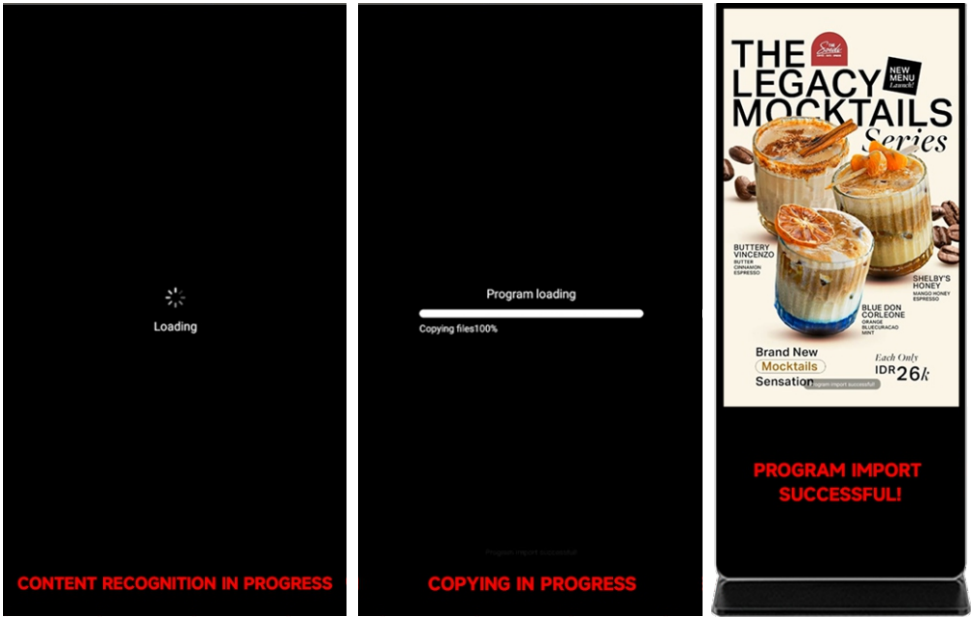


Content plays automatically once the drive is detected

Publish Content By CMS System


Register Account Tutorial

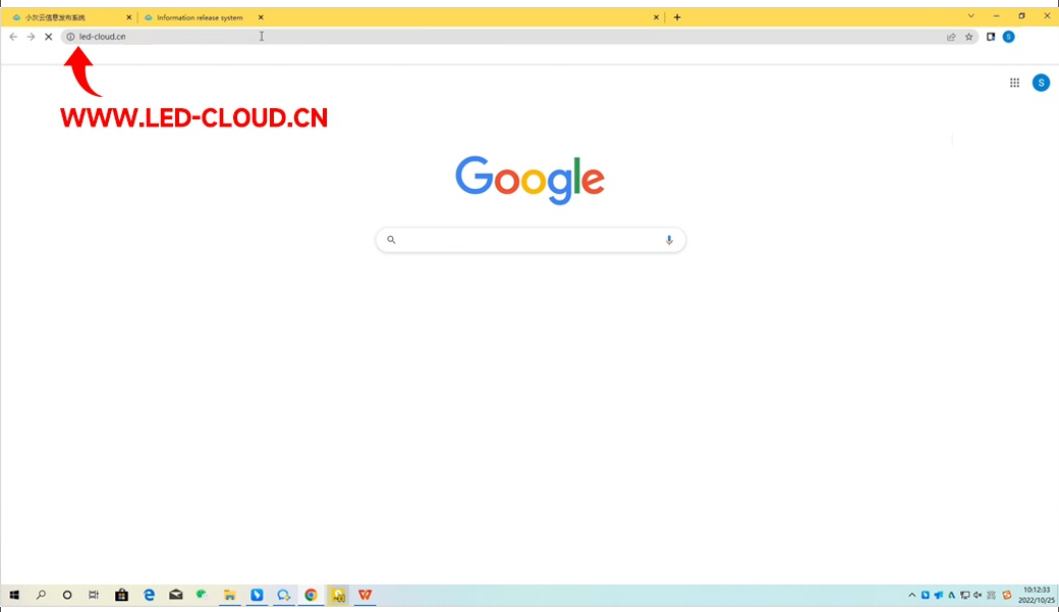

Open www.led-cloud.cn in your browser
(Google Chrome recommended), then click Register.

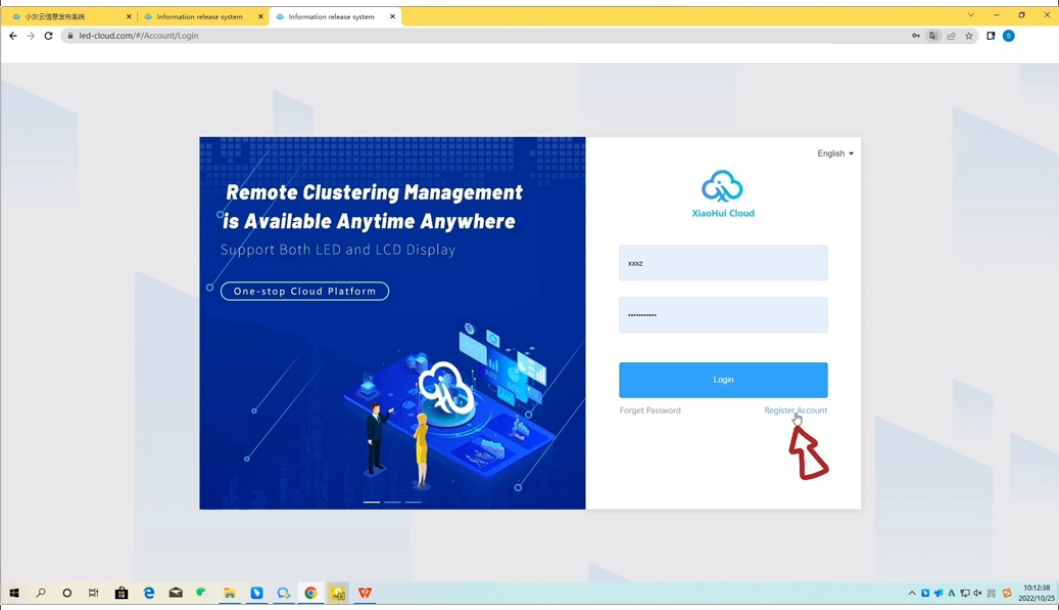


Click Register Account

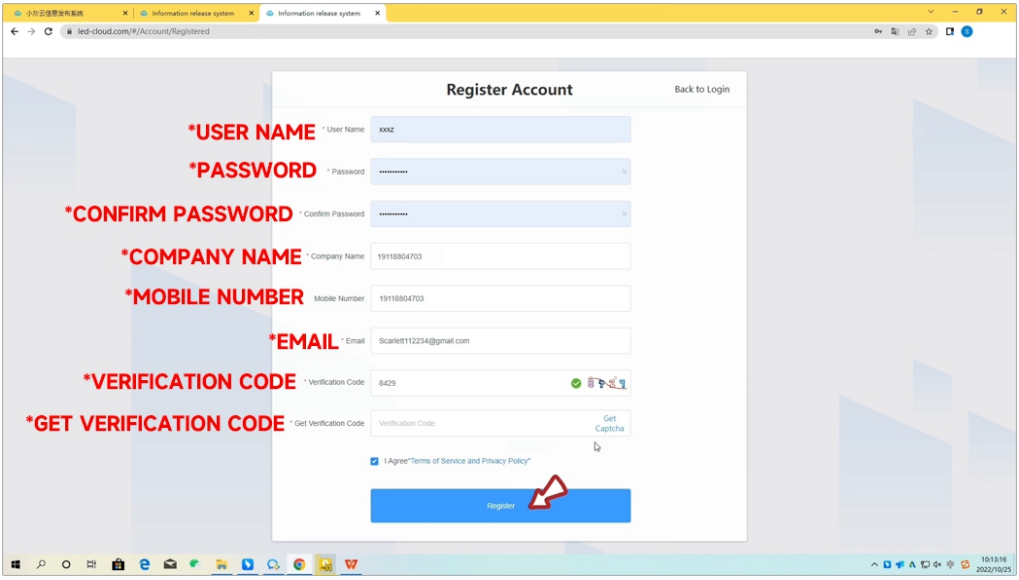

Fill in your details and create an account.

(Fields marked * are required.)

Binding Account Tutorial

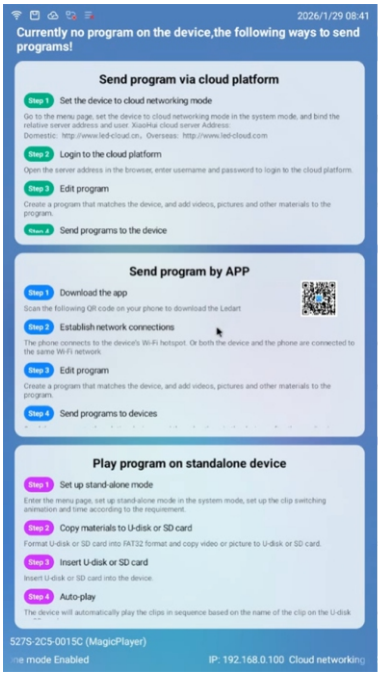



1.MOUSE OPERATION

CONTINUOUS MOUSE CLICKS

ENTER THE MESSAGE SENDING INTERFACE

2.REMOTE CONTROL OPERATION

REMOTE CONTROL CLICK

ENTER THE MESSAGE SENDING INTERFACE




3.TOUCH OPERATION


TAP THE SCREEN CONTINUOUSLY

ENTER THE MESSAGE SENDING INTERFACE


(*THE DEVICE NEEDS TO BE A TOUCH VERSION)


Binding Account Tutorial

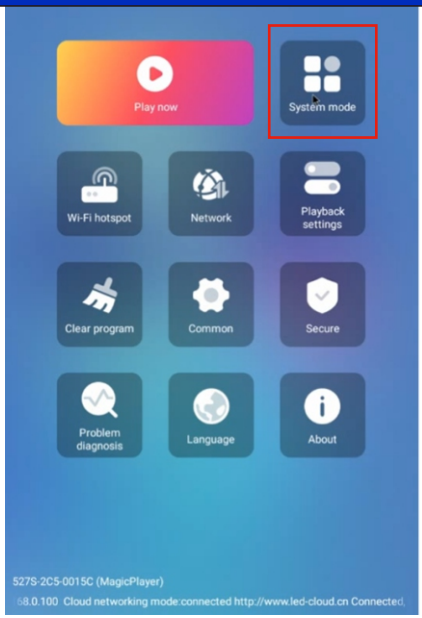




Select system mode

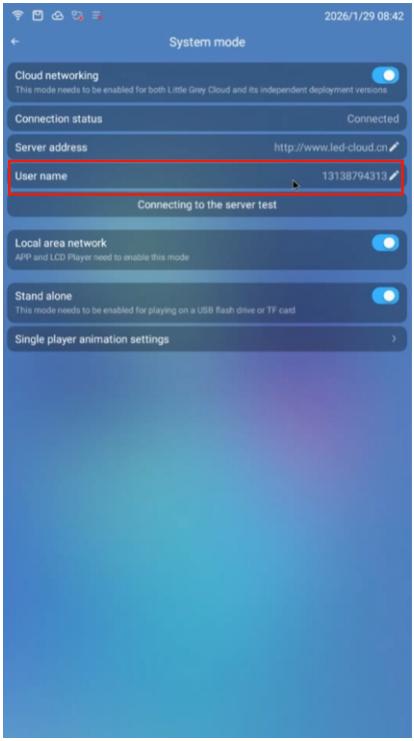

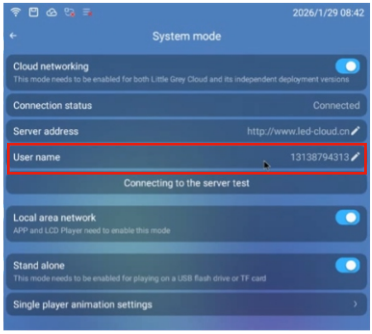


Tap the Uset name

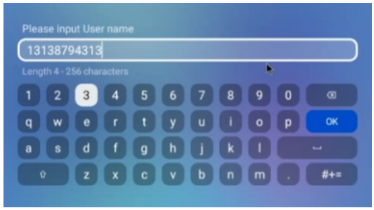


Then enter TheRegistered account




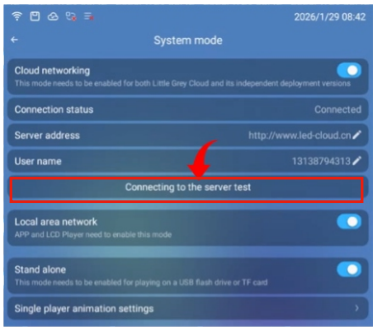


Click to bind account

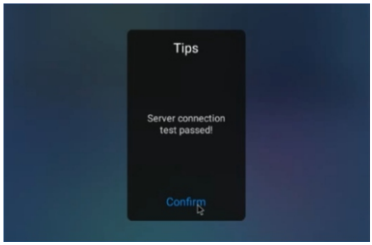


Binding successful

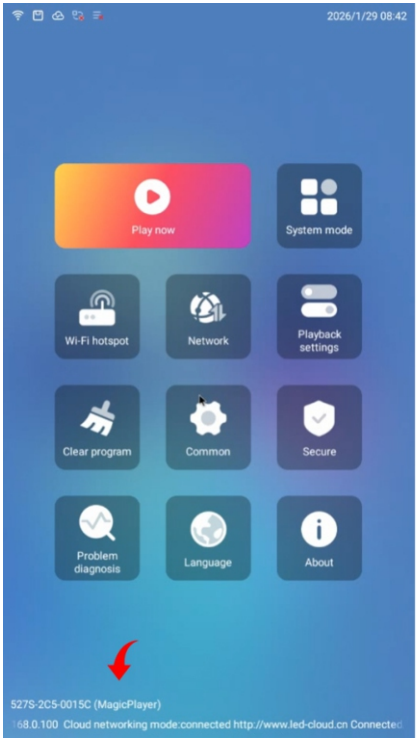




Once the binding is successful. The monitor displays your account information.


Publish Content By CMS System

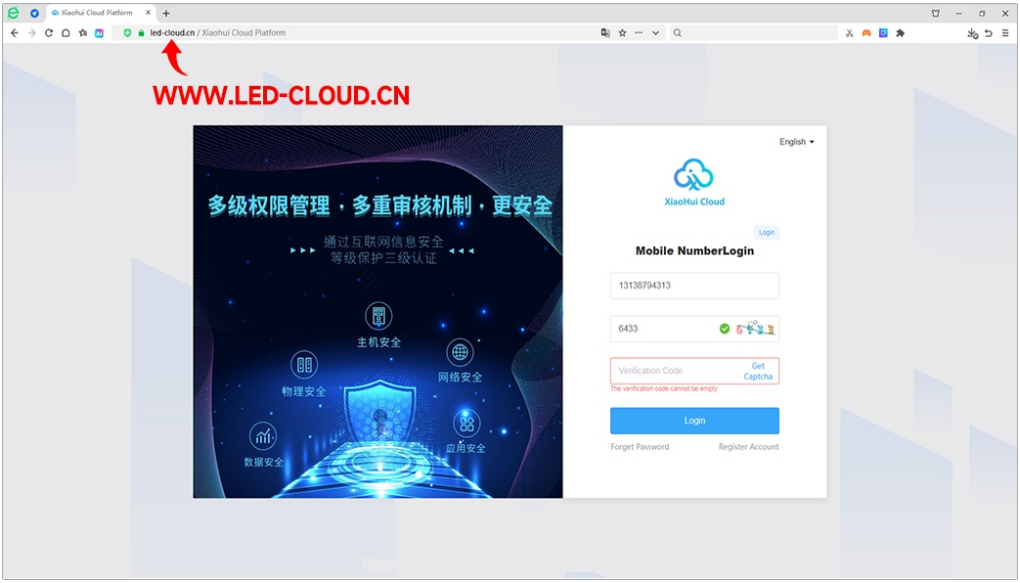


Open the information publishing website in the browser

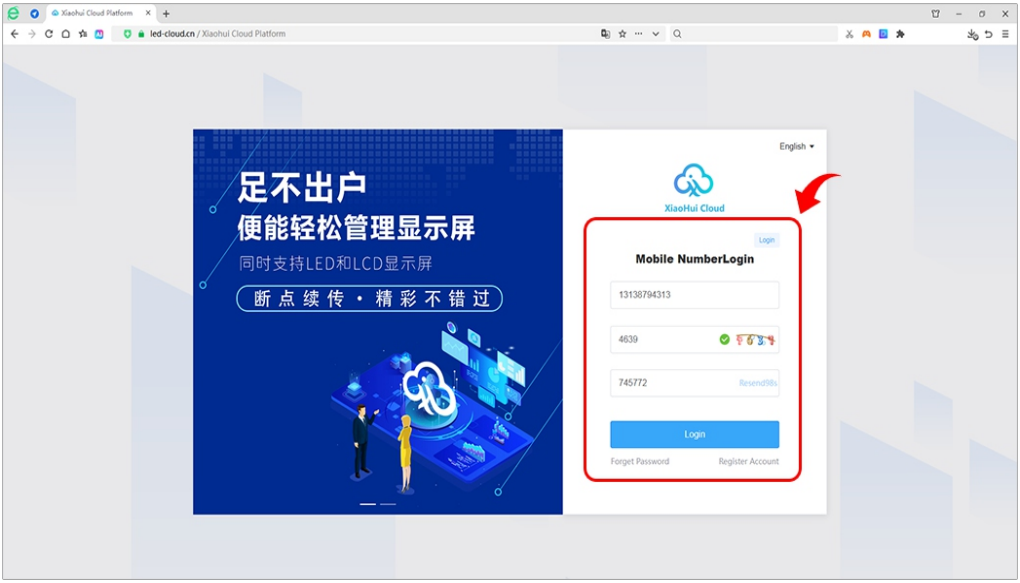


Open the content management website in your browserand log in with your registered account.

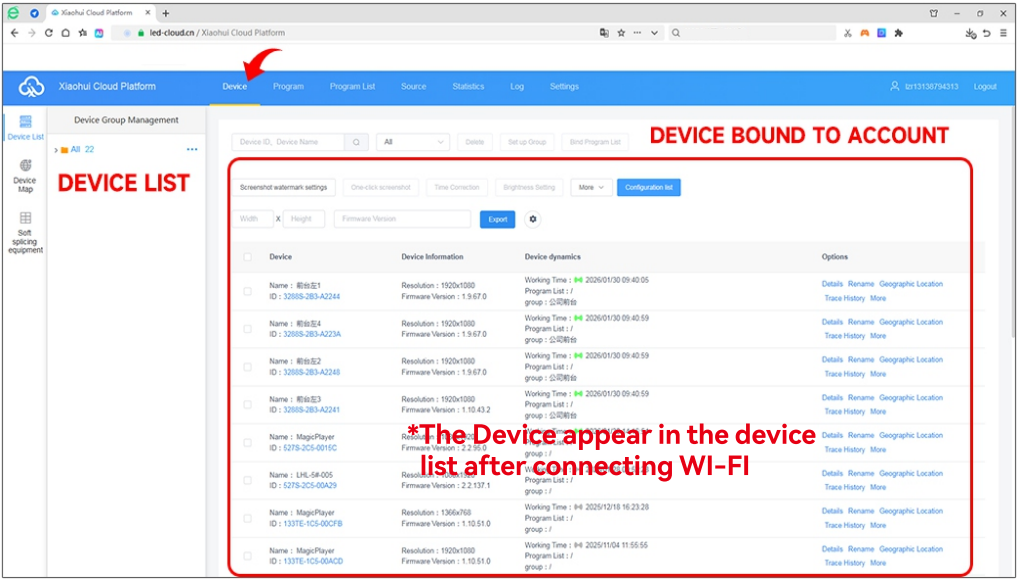


This page lists the displays bound to your account.

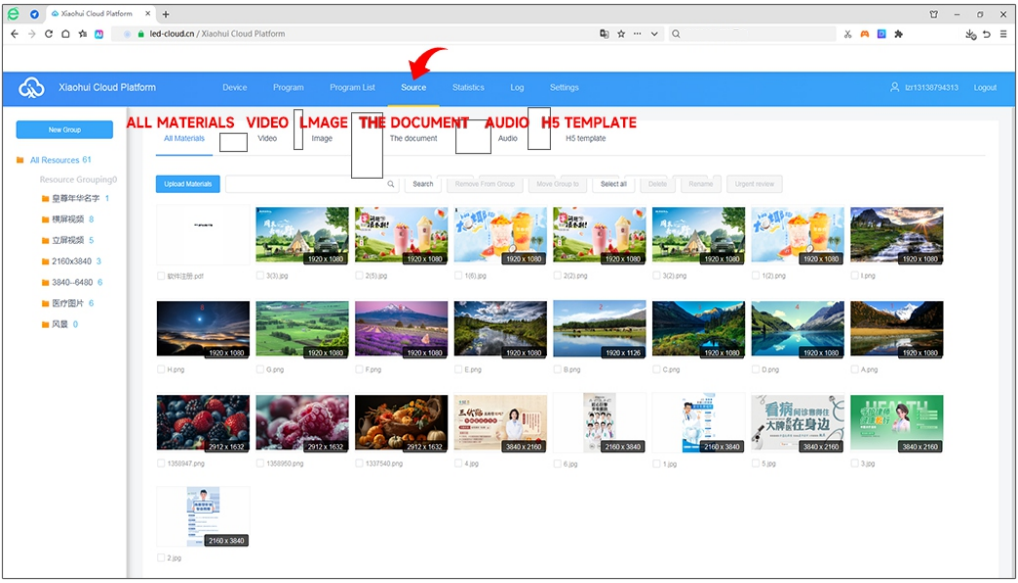


Click Source to open image / video management.

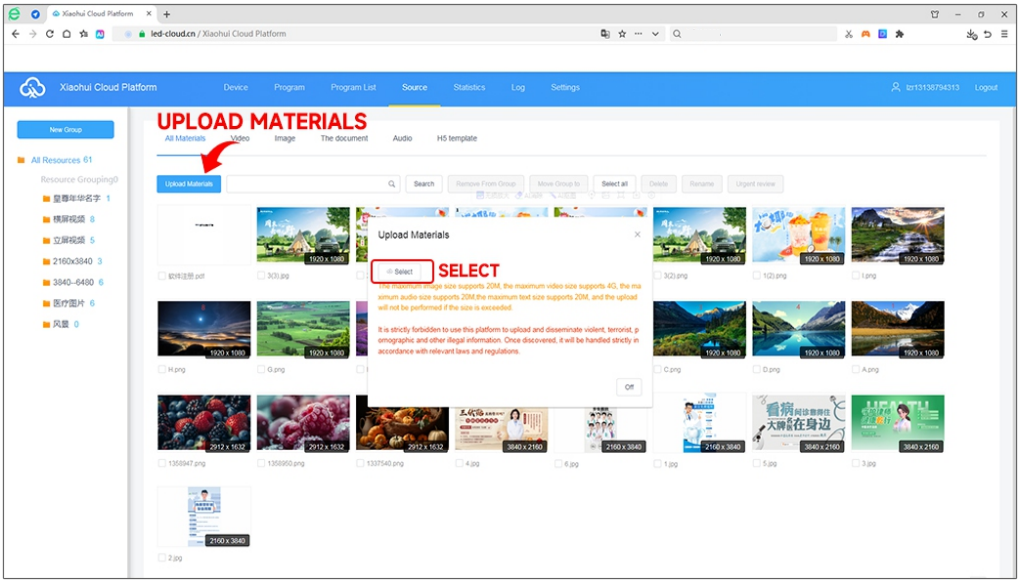


Click Upload, then select the image or video you want to upload.

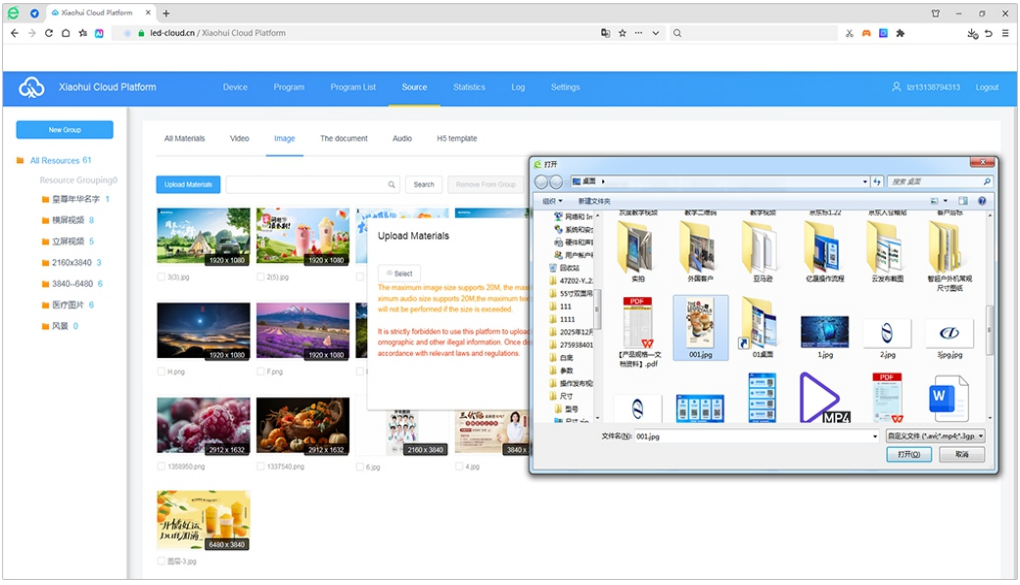


Select the image/video to upload

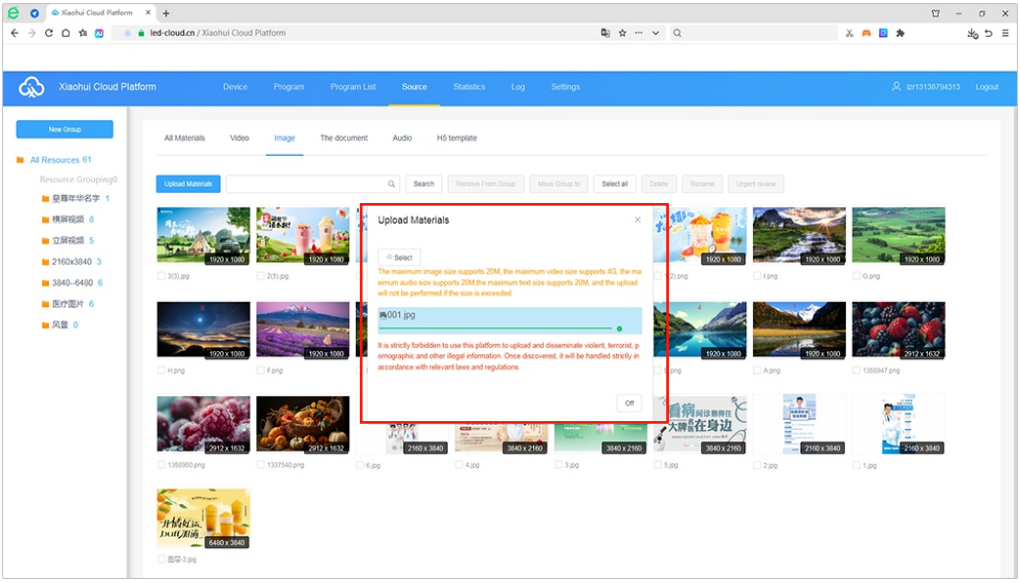


Wait for the upload to finish.

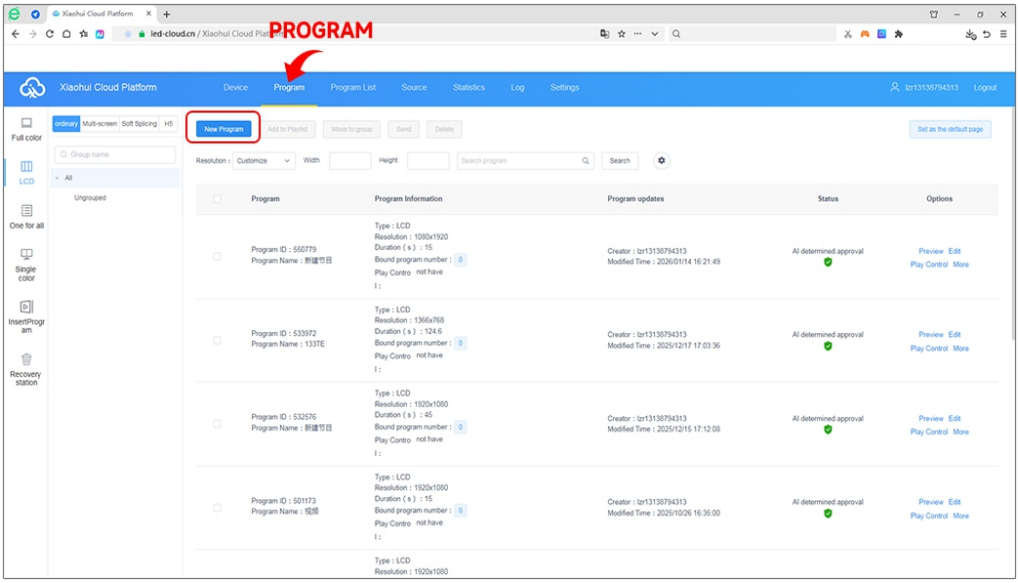


Click Program,
then New Program, to create a program.

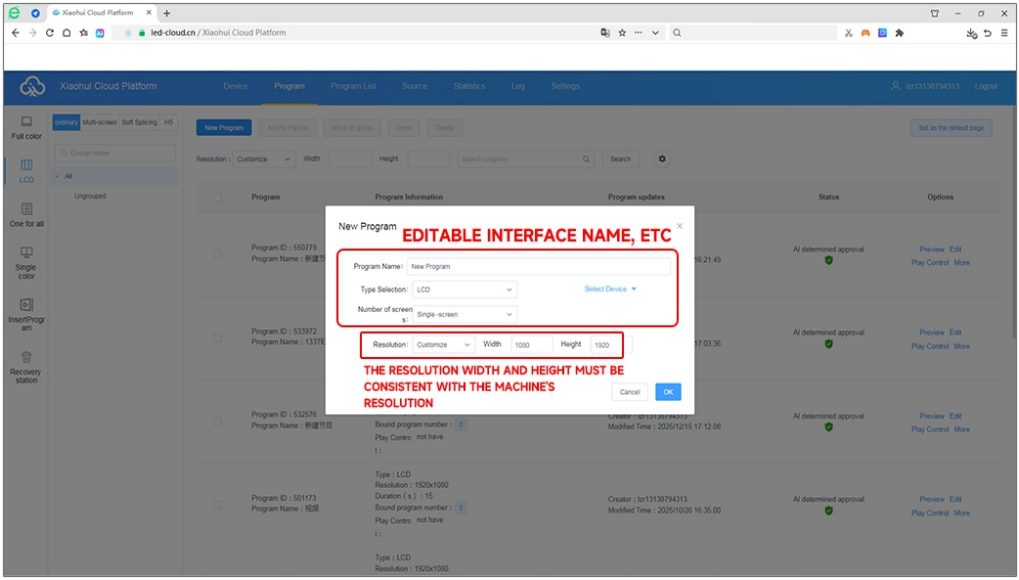


Set the program name, resolution and other settings.
(The program resolution must match the display.)

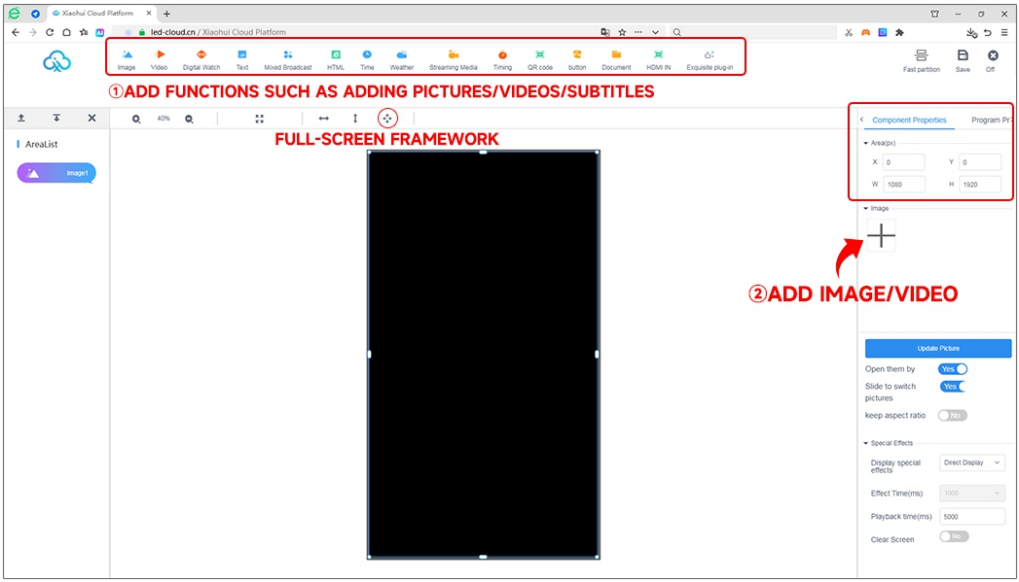


Click Add Image or Add Video.

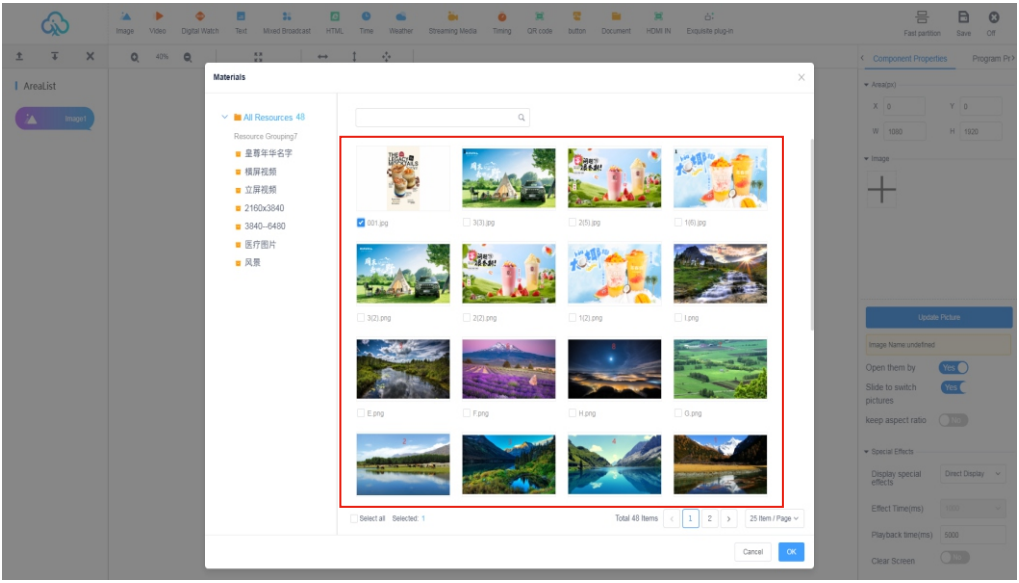


Add the content you want to play, then click Save.

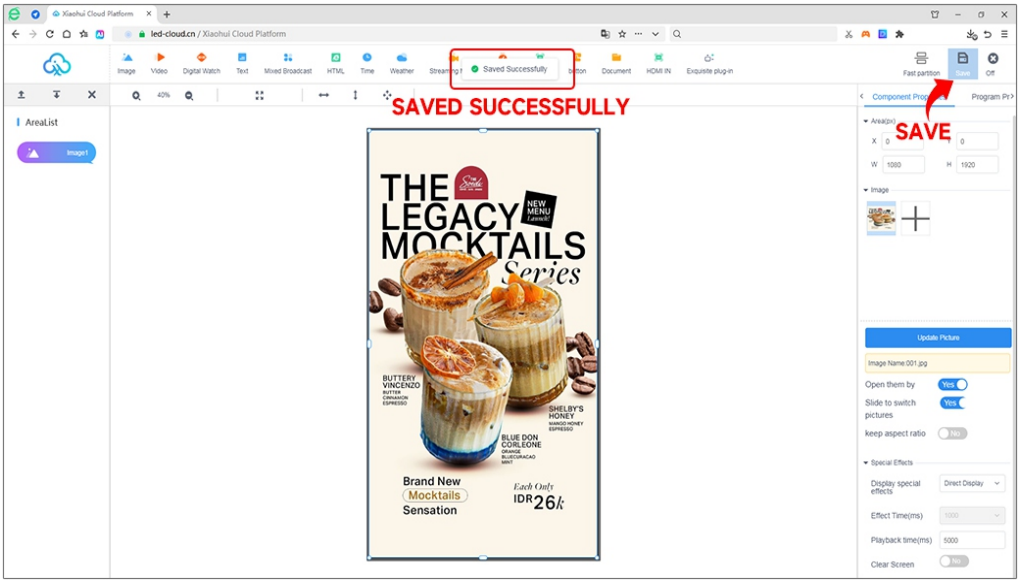

Click to save the program

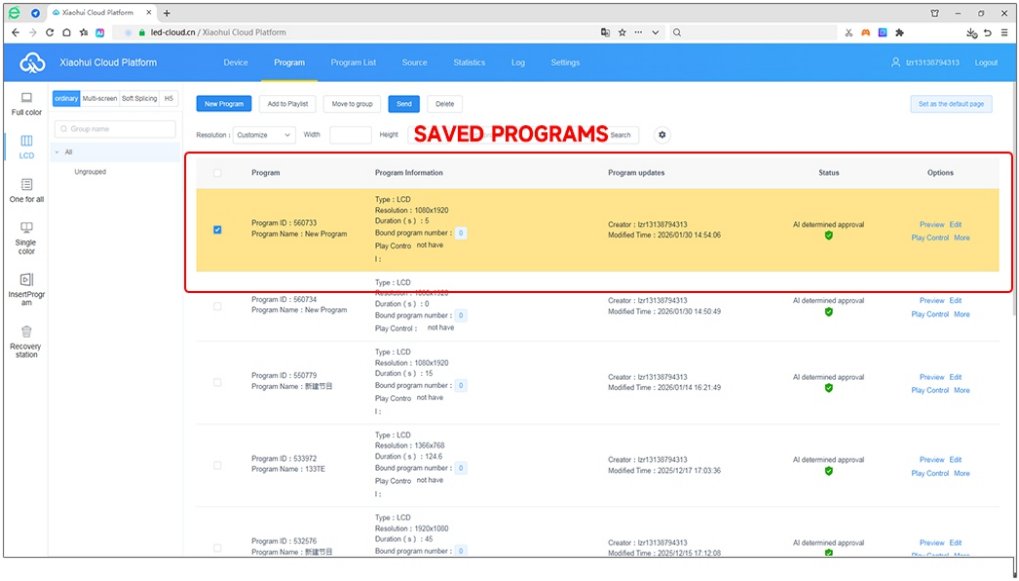

Select the program you just saved

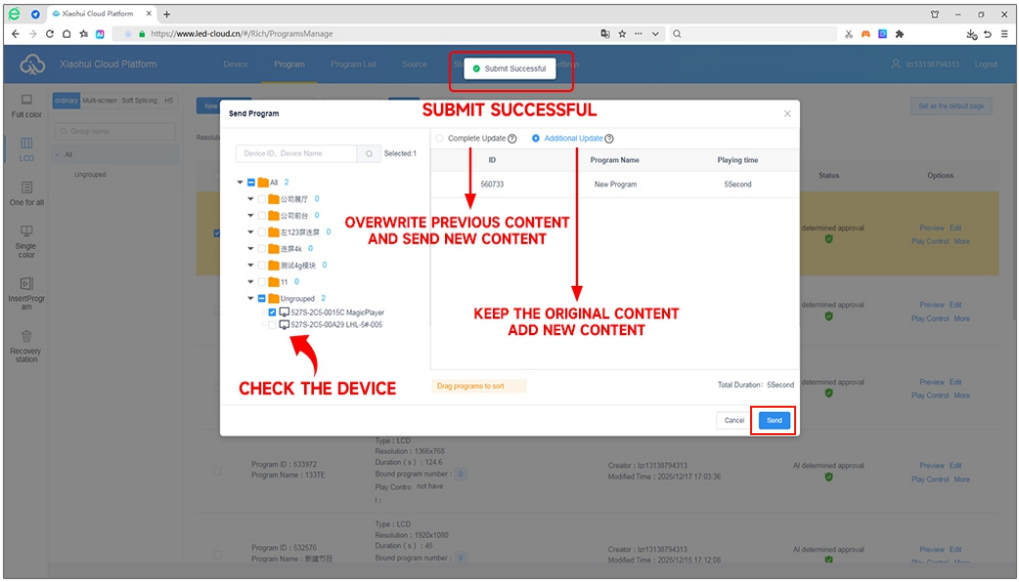

choose the target display, then click Send.

Publish Content By Mobile APP

Download Mobile APP





Scan to download LedArt

Google Play · hdplayer.net


Scan the QR code to download the mobile app.

Bind the Advertising Display with Phone

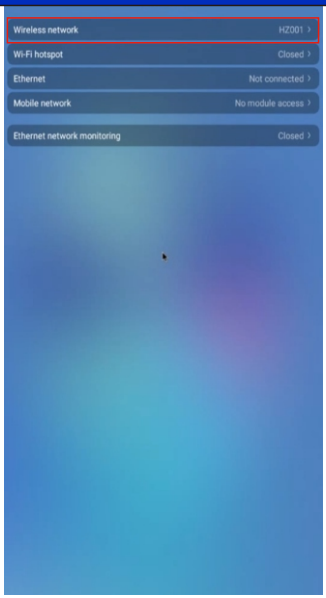


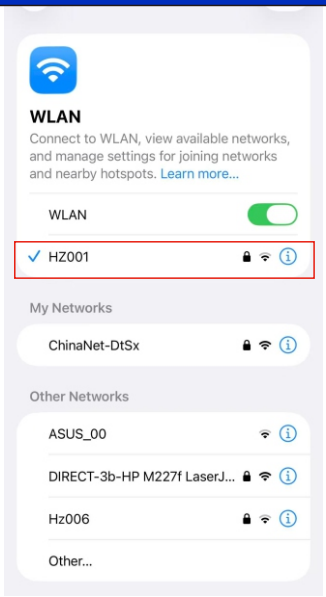

Confirm that the device and the phone are connected to the same WiFi

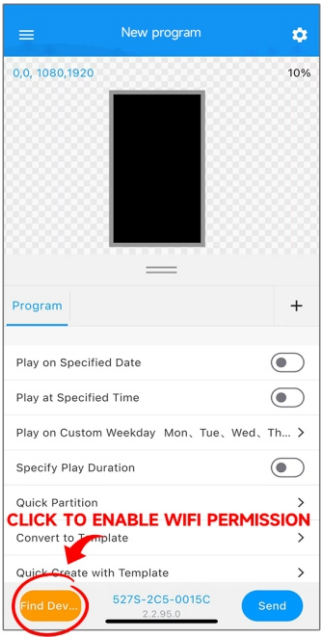


Open the app and Tap fine device

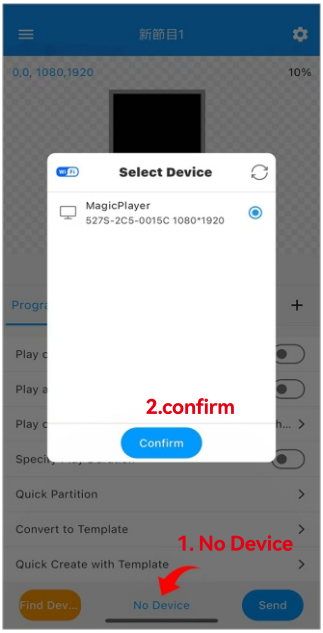


Tap "No device", then Tap “confirm”


Publish Content By Mobile APP

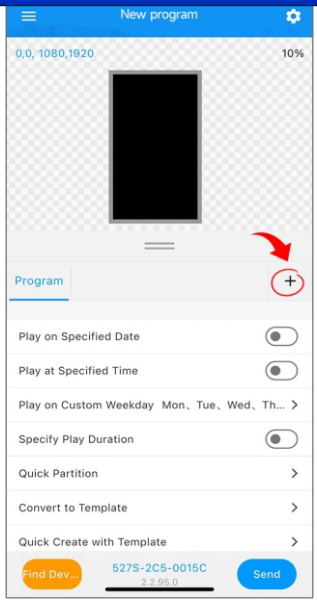

Once connected, tap the + icon to create a program.

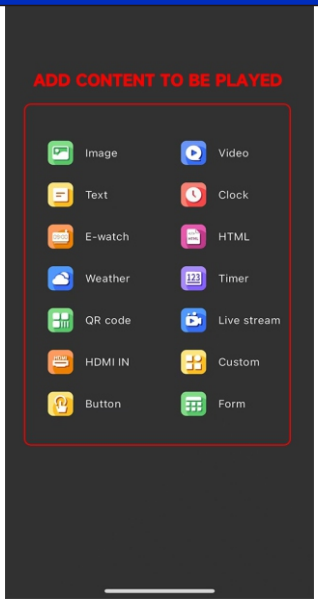


Select the program type (image / video).

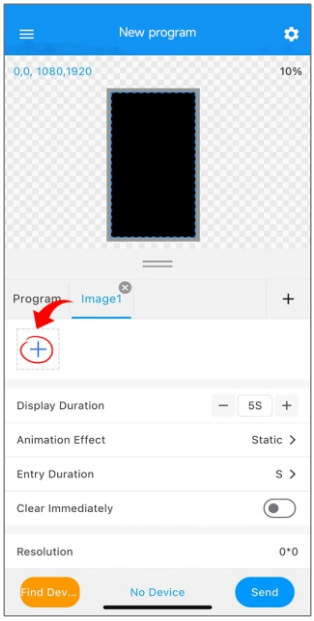


Tap + to add content, then select the image or video you want to play.



Select the image or video to be played

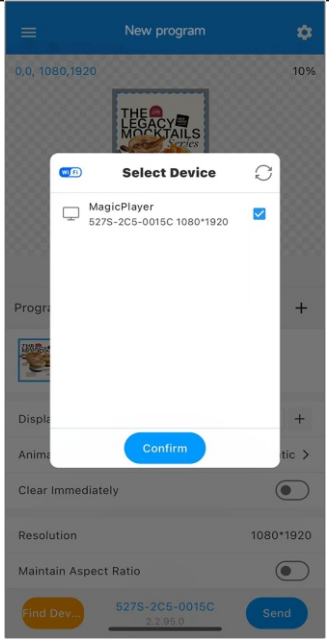

Select the target displays and tap OK.

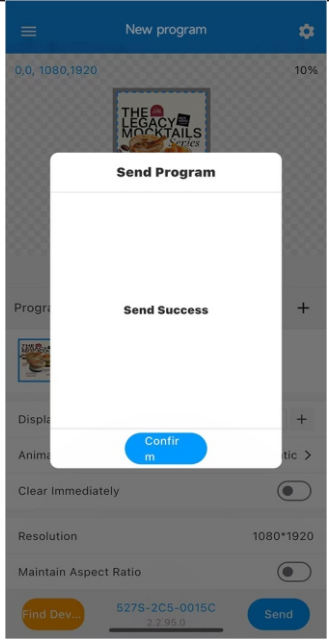

The content is sent and plays automatically —your ad distribution is complete.



Advertisement distribution completed Device auto play

Remote control usage instructions



PROFESSIONAL COMMERCIAL DISPLAY MANUFACTURER

Wall-mounted, floor-standing and desktop digital signage displays. OEM / ODM customization available.

Designed & Manufactured by CLIVCEOVEZ